


## Self Contained Ice Machine up to 120 Kg



### Features

- Up to 120 kg (264 lbs.) of flake ice production per day
- Up to 32 kg (70 lbs.) built-in ice storage
- Electronically controlled operation, with self-diagnostic functions with external alarm lights providing operational information for early alert and fast diagnosis of operating issues
- External Components constructed from corrosion-resistant stainless steel crafted for optimal aesthetic appeal through superior fit and finish
- Ergonomically convenient, slanted & disappearing storage bin door
- Front Access for Easier Maintenance
- Filter-free air cooled condenser, designed to operate without the need of air filters
- Front-in, front-out airflow allows for built-in installations
- CFC Free R-134 Refrigerant
- 120 mm (4 12/16") legs included, extensions available as option
- Two years manufacturer warranty

### AF 200 Technologies

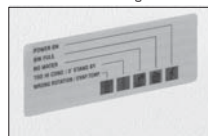

SS AISI 304

Electronic

|           |  | 10°: 10°C |       | 21°: 15°C |       |      |       | WxDxH mm<br>592x622x1006<br>[WxDxH inches]<br>23"x24"x39" |
|-----------|--|-----------|-------|-----------|-------|------|-------|-----------------------------------------------------------|
|           |  | [kg]      | [lbs] | [kg]      | [lbs] | [kg] | [lbs] |                                                           |
| AF 200 AS |  | 120       | 264   | 110       | 242   | 32   | 70    | <br>[v/Hz/ph]<br>230/50/1<br><br>R 134 a                  |
| AF 200 WS |  | 120       | 264   | 110       | 242   | 32   | 70    |                                                           |

Standard legs 120 mm high included.

This product qualifies for the following listings:



Flake Ice  
Humidity 25%



**2** Years Warranty


Subject to certain limitations and exclusions

Certified ISO 9001:2000

[www.scotsman-ice.it](http://www.scotsman-ice.it)  
[www.scotsman-ice.com](http://www.scotsman-ice.com)

Models and specifications are subject to change without notice.

## Self Contained Ice Machine up to 120 Kg

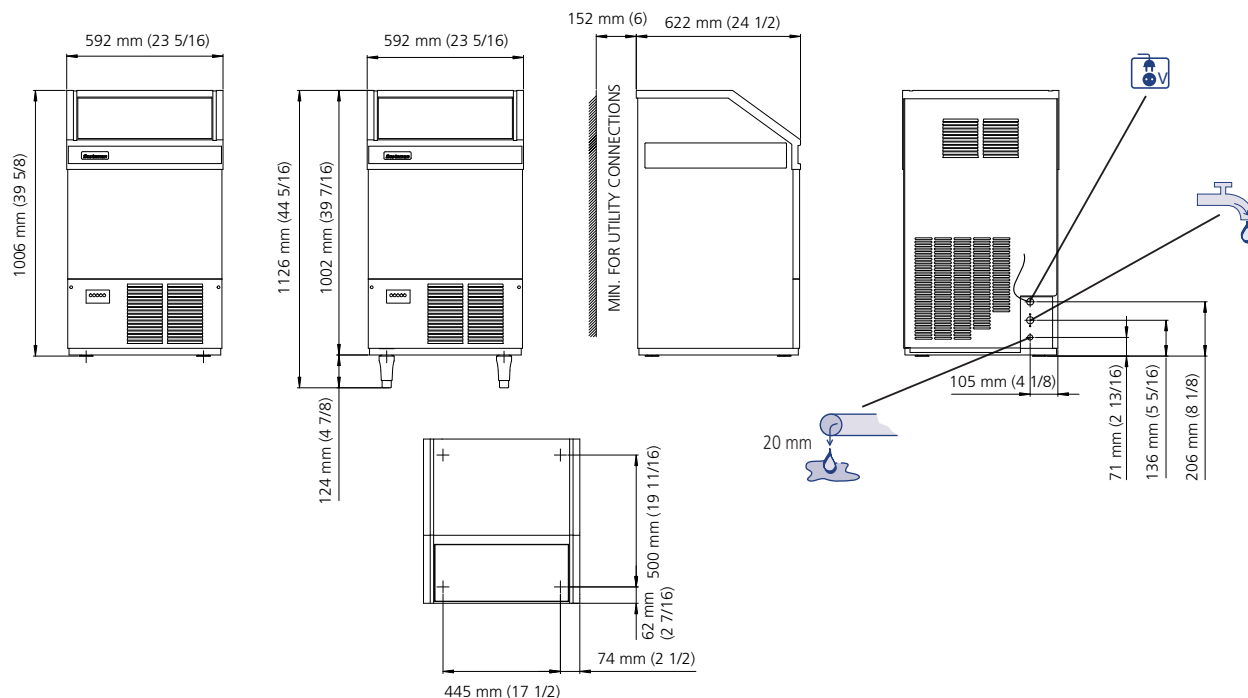

### AF 200 AIR COOLED



| °C<br>°F | 50°<br>10° | 60°<br>15° | 70°<br>21° | 90°<br>32° |     |
|----------|------------|------------|------------|------------|-----|
| 10°      | 120        | 116        | 112        | 104        | kg  |
| 50°      | 264        | 256        | 247        | 229        | lbs |
| 21°      | 114        | 110        | 106        | 98         | kg  |
| 70°      | 251        | 242        | 234        | 216        | lbs |
| 32°      | 103        | 99         | 95         | 87         | kg  |
| 90°      | 227        | 218        | 209        | 192        | lbs |
| 38°      | 96         | 92         | 88         | 80         | kg  |
| 100      | 212        | 203        | 194        | 176        | lbs |



### AF 200 WATER COOLED



| °C<br>°F | 50°<br>10° | 60°<br>15° | 70°<br>21° | 90°<br>32° |     |
|----------|------------|------------|------------|------------|-----|
| 10°      | 120        | 116        | 112        | 104        | kg  |
| 50°      | 264        | 256        | 247        | 229        | lbs |
| 21°      | 114        | 110        | 106        | 98         | kg  |
| 70°      | 251        | 242        | 234        | 216        | lbs |
| 32°      | 106        | 102        | 98         | 90         | kg  |
| 90°      | 234        | 225        | 216        | 198        | lbs |
| 38°      | 104        | 100        | 96         | 88         | kg  |
| 100      | 229        | 220        | 212        | 194        | lbs |



#### Minimum

10°C (50°F)



#### Maximum

40°C (104°F)

5°C (41°F)



35°C (95°F)

-10%



+10%

1 BAR

14 psi



5 BAR

70 psi

|           |  | [Btu/h] | [W]  | [Ømm <sup>2</sup> ] | [W] | FUSE | [kWh] - 100 Kg | [l/h] | [gal/h] | [kg] | [lbs] |
|-----------|--|---------|------|---------------------|-----|------|----------------|-------|---------|------|-------|
| AF 200 AS |  | 3440    | 1010 | 3 x 1.5             | 330 | 10   | 10.90          | 4.1   | 1.1     | 65   | 143   |
| AF 200 WS |  | 3440    | 1010 | 3 x 1.5             | 330 | 10   | 10.90          | 33    | 8.7     | 67   | 148   |

### CONTACT POINTS:

**Europe**  
Scotsman Europe-Frimont S.p.A.  
Via Puccini, 22  
20010 Pogliano (Milano) Italy  
Ph: (+39) 02-93960208  
Fax: (+39) 02-93960201  
scotsman.europe@frimont.it

**Asia and Pacific**  
Scotsman Ice Systems-Frimont S.p.A. (R.O.)  
627A Aljunied Road-#04-04 Biztech Centre  
Singapore 389842  
Ph: (+65) 6738 5393  
Fax: (+65) 6738 1959  
scotsice@singnet.com.sg

**China**  
Scotsman Ice Systems (Shanghai)  
Room 2503, Building 2  
20 Xuhong Middle Road, Xuhui District  
Shanghai China 200235  
Main line: (+86) 21 61313200  
Fax: (+86) 21 61313330  
scotsman.shanghai@scotsman-china.com

**Middle East & N. Africa**  
Scotsman Ice Systems Dubai Office  
P.O. Box 21648  
Sharjah - U.A.E.  
Ph: (+97) 16-5773-164  
Fax: (+97) 16-5773-165  
scotsman@eim.ae

**South Africa**  
Scotsman Ice Systems SA (PTY) Ltd.  
10, Rhodes Street - Kensington B  
P.O. Box 44 - Riverclub 2149  
Ph: (+27) 11-7898400  
Fax: (+27) 11-7898411  
scotsman@telkomsa.net

**Spain**  
Scotsman España, S.L.U. c/ Galapagar, 12  
Poligono Industrial Ventorro del Cano  
28925 Alcorcon (Madrid)  
Ph: +34-91-1109796  
Fax: +34-91-6337423  
E-mail: scotsman@scotsman-espana.es  
www.scotsman-espana.es